









# Operating instructions

Model-No.: JK 98/48-0

**Ergoline SUNRISE 480 LED Turbo Power** 

1016257-02A / us / 12.2016



# **Contact information**

#### Manufacturer



#### JK-Products GmbH

Köhlershohner Straße 53578 Windhagen GERMANY

Tel.: +49 (0) 22 24 / 818-140 Fax: +49 (0) 22 24 / 818-166

#### **Customer Service**

JK Products & Services, Inc.



#1 Walter Kratz Drive Jonesboro, AR 72401 800-445-0624



http://support.jkamerica.com

# **A** WARNING!

870-935-9046



Read these operating instructions.

Failure to observe these instructions:

- · may result in serious injury and death,
- can result in damage to the device and the environment.
- For the safety of yourself and others, read and observe all instructions contained herein before operating the device.
- Please make the instructions and additional information available to anyone who operates or services the device.

#### Copyright

The copyright remains with JK-Holding GmbH.

The contents may not be duplicated (in whole or part), distributed or utilized for competition purposes without authorization or disclosed to other parties.

The right to make technical changes in regard to the figures and information contained in this instruction manual is reserved!

# 1 Table of Contents

2	What certain words and signs mean (Glossary)	6
2.1	Definitions	6
2.2	Warning signs	7
2.3	Symbols on the device	9
3	What this device is	11
3.1	Guidelines	11
3.2	Export	11
3.3	Scope of delivery	11
3.3.1	Optional	11
3.4	Device description	12
3.5	Options	13
3.6	Function description	13
3.7	Transport	14
3.8	Installation location	14
3.8.1	Ventilation	14
3.8.2	Setup location	15
3.8.3	Commissioning	16
3.9	Signs and stickers on the device	17
3.10	Technical data	23
3.10.1	Power rating, electrical specifications and noise level	
3.10.2	Dimensions	24
3.10.3	Lamp configuration	25
3.10.4	Accent lighting	25
3.10.5	Spare parts	26
4	Why you use it	27
4.1	Intended use	27
4.2	Skin condition	27
5	Who cannot use it	28
5.1	Prohibited usage	28
5.1.1	Tanning system/Beauty system	
5.1.2	Vibra Shape (vibration plate)	
6	What you must do to avoid serious harm	29
6.1	General	29
6.2	Tanning system	
6.3	Sensor	
7	What you must do to avoid other harm	31
7.1	General	31
7.2	Tanning system	
7.3	Sensor	

7.4	Vibra Shape - vibration plate - (additional feature)	31
7.5	Foreseeable misuse	32
7.6	Obligations of the studio operator	32
7.7	Staff training	32
8	Risks of using this device	33
9	Benefits of using this device	34
10	How to decide to use this device	35
11	What to do before the treatment	36
12	How to use this device	37
12.1	How to set this device up	37
12.2	How to make sure the device works	37
12.3	How to use it to treat your condition	37
12.4	How to choose correct treatment regimen	37
12.4.1	Skin types	37
12.4.2	Tanning times	38
12.5	How to operate the device	39
12.5.1	Control Center	39
12.5.2	User settings overview	39
12.6	Functions	40
12.6.1	Navigation	41
12.6.2	Description	41
12.7	Operating display of the sensor	43
12.8	Selection of the application	44
12.9	Sun Select setting with the outer interface	44
12.10	Measurement (automatic mode)	44
12.11	Connections	44
12.12	How to use	46
12.12.1	How to start	46
12.12.2	Application tips	47
12.12.3	How to stop	47
12.13	What to do after the treatment	48
12.13.1	Cleaning and disinfection	48
12.14	Safety instructions for cleaning/disinfection and maintenance	49
12.15	How to clean/disinfect	
12.15.1	Cleaning and disinfection of surfaces	52
12.15.2	Cleaning/disinfection plan	53
12.16	How to maintain	
12.16.1	Technical modifications	54
12.16.2	Maintenance plan	54
12.16.3	Cleaning and maintenance work preparation	
12.16.4	Instructions for replacing the lamps	57
12.16.5	Cleaning and disinfection of the sensor	

12.16.6	Cleaning or replacing UV lamps in the door	60
12.16.7	Cleaning or replacing UV lamps and filter panels on the side walls	61
12.16.8	Cleaning or replacing UV lamps and filter panels in the canopy	63
12.16.9	Cleaning or replacing the UV lamps and filter panels in the shoulder tanner	63
12.16.10	Cleaning or replacing Ambient Light	63
12.16.11	Cleaning or replacing the canopy accent lighting	
12.16.12	Cleaning or replacing the front panel accent lighting	63
12.16.13	Cleaning the filters in the base	63
12.16.14	Cleaning the canopy filter mats	63
12.16.15	Cleaning the filter mats in shoulder tanner	63
12.16.16	Air conditioning: Empty the condensation tank and clean the filter	63
12.16.17	AQUA / AROMA SYSTEM maintenance	63
12.17	How to store the device	64
12.17.1	Decommissioning	64
12.17.2	Storage	
12.17.3	Disposal	
13	What to do when things go wrong	
13.1	Troubleshooting	66
14	Where you can find out more	67
15	How we studied this device	68
16	Appendix	69
16.1	Model-No.: JK 98 / 48-0: EMC information	69
16.1.1	Table 201: Guidelines and manufacturer's declaration –	
	Electromagnetic emissions	69
16.1.2		
16.1.2 16.1.3	Electromagnetic emissions  Table 202: Guidelines and manufacturer's declaration –	70
	Electromagnetic emissions	70 71
16.1.3 16.1.4	Electromagnetic emissions	70 71
16.1.3	Electromagnetic emissions  Table 202: Guidelines and manufacturer's declaration – Electromagnetic interference  Table 204: Guidelines and manufacturer's declaration – Electromagnetic interference  Table 206: Recommended safe distances between portable and mobile HF communications equipment and Model-No.: JK 98 / 48-0  JK-Products, Inc. – Limited Warranty	70 71 72
16.1.3 16.1.4	Electromagnetic emissions  Table 202: Guidelines and manufacturer's declaration – Electromagnetic interference  Table 204: Guidelines and manufacturer's declaration – Electromagnetic interference  Table 206: Recommended safe distances between portable and mobile HF communications equipment and Model-No.: JK 98 / 48-0  JK-Products, Inc. – Limited Warranty  Limited Acrylic Warranty	70717273
16.1.3 16.1.4 17 17.1	Electromagnetic emissions  Table 202: Guidelines and manufacturer's declaration – Electromagnetic interference  Table 204: Guidelines and manufacturer's declaration – Electromagnetic interference  Table 206: Recommended safe distances between portable and mobile HF communications equipment and Model-No.: JK 98 / 48-0  JK-Products, Inc. – Limited Warranty  Limited Acrylic Warranty  Warranty Claims	7071727374
16.1.3 16.1.4 17 17.1 17.2	Electromagnetic emissions  Table 202: Guidelines and manufacturer's declaration – Electromagnetic interference  Table 204: Guidelines and manufacturer's declaration – Electromagnetic interference  Table 206: Recommended safe distances between portable and mobile HF communications equipment and Model-No.: JK 98 / 48-0  JK-Products, Inc. – Limited Warranty  Limited Acrylic Warranty  Warranty Claims  Policy & Procedures	707172737474
16.1.3 16.1.4 17 17.1 17.2 17.2.1	Electromagnetic emissions  Table 202: Guidelines and manufacturer's declaration – Electromagnetic interference  Table 204: Guidelines and manufacturer's declaration – Electromagnetic interference  Table 206: Recommended safe distances between portable and mobile HF communications equipment and Model-No.: JK 98 / 48-0  JK-Products, Inc. – Limited Warranty  Limited Acrylic Warranty  Warranty Claims	70717273747474

# 2 What certain words and signs mean (Glossary)

# 2.1 Definitions

# Studio operator

People who provide tanning devices to users on a commercial basis. The studio operator is trained to operate and maintain the device and is responsible for the orderly operation of the device as well as compliance with the maintenance intervals.

#### User

A person who uses the tanning device at a commercial location.

#### Staff

People who are responsible for the operation, cleaning/disinfection as well as general maintenance work and who instruct the users in the operation of the devices.

# Authorized, trained and qualified staff

Qualified staff from an external company who have been trained and authorized by the manufacturer for assembly and maintenance work with specific devices.

#### Contraindications

Issues where the risk is always greater than the benefit and there are data supporting the risk and benefit relationship.

#### 2.2 Warning signs

Danger notices, nonobservance will lead to death or serious injury:



# A DANGER!



Type and source of danger, e.g. 'DANGER - High voltage!'

Description of the consequences, e.g. 'You can be killed or injured by an electric shock!'

#### Countermeasures:

- Disconnect device from power supply before opening.
- Do not reach into the inside with the device switched on.

Warning notices, nonobservance can lead to death or serious injury.





Type and source of danger, e.g. 'WARNING - hot surface!'

Description of the consequences, e.g. 'You can burn your hand (skin, face)!'

#### Countermeasures:

- Do not touch hot parts and nearby surfaces.
- Wait until hot parts and surfaces have cooled down.

Warning notices, ultraviolet radiation, nonobservance can lead to serious injury:





Type and source of danger, e.g. 'WARNING – ultraviolet radiation!'

Description of the consequences, e.g. 'You can burn your skin!'

Countermeasures, e.g.:

Avoid overexposure.

12/2016 1016257-02A Operating instructions – 7/80 Caution notices, nonobservance can lead to less than serious injury or damage of property.

# **A** CAUTION!



# **Unauthorized lamps!**

The word 'Caution' together with the warning sign points out that less than serious injury can be expected here.

#### Countermeasures:

- Avoid doing this.
- Do that.

#### **NOTICE**



# ESD-sensitive components!

The word 'NOTICE' without warning sign points out that danger for devices, materials and the environment can be expected here.

#### Countermeasures:

- Avoid doing this.
- Do that.

# Important information:



#### NOTE:

This symbol does not identify safety notices, but states information for a better understanding of the processes.

#### 2.3 Symbols on the device

The following symbols are displayed on the device:


Manufacturer, production year and month

Type BF applied part1

Follow Operating Instructions.









Where there are great differences in temperature between the transport route and the installation site the device may not be put into operation immediately after being set up.

Wait at least 2 hours before connecting the device to the power supply.



Maximum transport weight



Do not stack!



This side up.



Keep dry.



Temperature limitations.


The temperature limits are noted next to the upper and lower horizontal line.



Recyclable material.

12/2016 1016257-02A Operating instructions – 9/80

<sup>&</sup>lt;sup>1</sup> Devices with physical contact between device and user belong to category BF (body float).

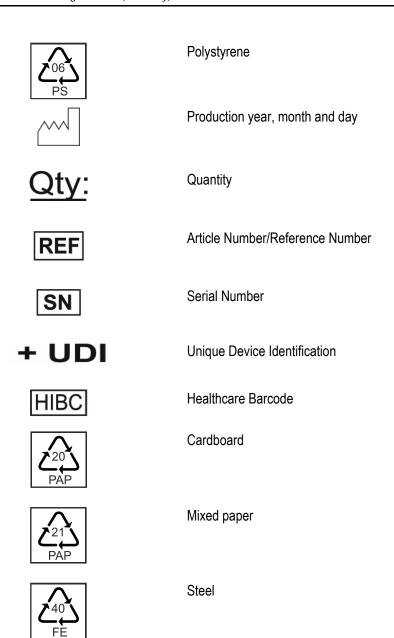

Wood

# 3 What this device is

# 3.1 Guidelines

This product is in conformity with the performance standards for sunlamp products under 21 CFR 1040.20, FDA and listed with ETL and CAN/CSA 22.2 No. 224.

# 3.2 Export

This device is exclusively intended for use in the USA and Canada and may not be exported to other countries and operated there! The manufacturer assumes no liability whatsoever in the event of non-compliance. High liability risks may occur for the exporter and/or the studio operator in the event of noncompliance.


# 3.3 Scope of delivery

- Tanning device
- Lamps
- Power cord
- Protective goggles
- Allen-key
- Remote controller for LED Light Show (including 3 batteries; in the technical documentation folder)
- Technical documentation (folder with instructions, brochures for error codes and default settings and additional documentation)

# 3.3.1 Optional


- Vibra Shape (additional feature)
- Privacy Kit
- 3D-Sound
- LED Interior Light (additional feature)

# 3.4 Device description

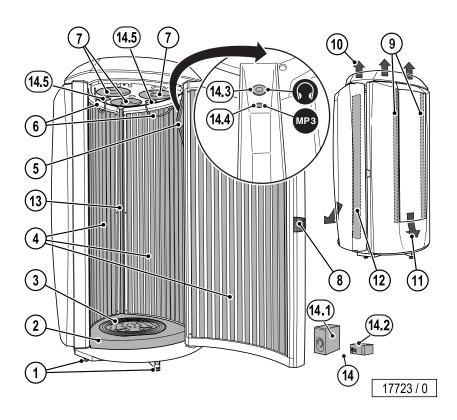

- 1. Height-adjustable feet
- 2. Base plate
- 3. Foot mat (silicone) and vibration plate (Vibra Shape) (additional feature)
- 4. UV low pressure lamps
- 5. Operating panel, headphone connection
- 6. Handles
- 7. Fans (body cooling)
- 8. Door handle
- 9. LED Light Show
- 10. Exhaust air (body cooling)
- 11. Exhaust air (equipment cooling)
- 12. Cable duct
- 13. LED Interior Light (additional feature)
- 14. 3D sound (audio system with Voice Guide) (additional feature) Subwoofer (14.1), Soundbox (14.2), Headphone connection (14.3), MP3-connection (14.4), Loudspeakers (14.5)

# 3.5 Options

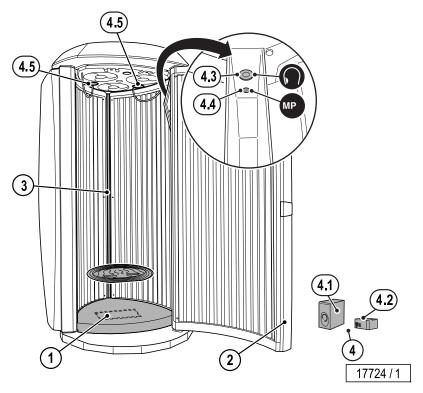

- 1. Floor mat and vibration plate, Vibra Shape
- 2. Privacy Kit
- 3. LED Interior Light
- 4. 3D-Sound (audio system with Voice Guide) Subwoofer (4.1), Soundbox (4.2), Headphone connection (4.3), MP3-connection (4.4), Loudspeakers (4.5)

# 3.6 Function description

The primary technical components of a tanning device are an artificial source of UV radiation, a variety of filters and reflectors as well as a mechanical structure with a defined active surface.

Different tanning results can be achieved in varying strength tanning devices. This is due to the different strength UV lamps and the different UV-A and UV-B proportions of the UV radiation. The UV-A proportion primarily generates a superficial tan, which appears rapidly and is intensive but also fades more rapidly, the UV-B radiation is primarily responsible for more long-term tanning results. The disadvantage of the UV-B radiation is that the tan does not become visible until one or two days after visiting the tanning salon. Therefore, the appropriate tanning device is to be selected depending on the desired tanning goal.

The tanning devices described here exclusively emit UV-A radiation.


#### Vibra Shape (additional feature)

The additional feature Vibra Shape, which can be used additionally, activates the entire muscular system through its vibrations.

Information about the Vibra Shape feature can be found in the separate document 'OI Vibra Shape #1016215-..' which is provided in the Technical Documentation folder.

12/2016 1016257-02A

# 3.7 Transport

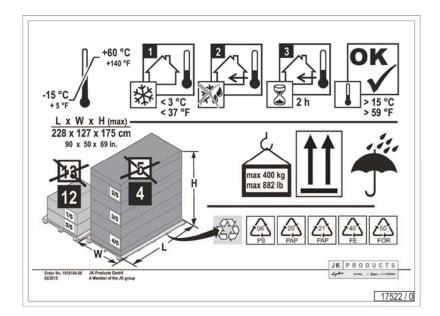

# 3.8 Installation location

You may find detailed information on installation and setting up in the Installation Instructions (see folder Technical Documentation).


# 3.8.1 Ventilation

# **NOTICE**

# Danger of failure!

Danger of overheating by obstruction of the air routing.

Observe the ventilation information to avoid serious system malfunctions.

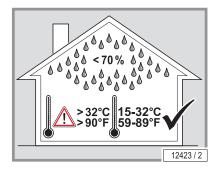

You can obtain data regarding the air supply and ventilation from the customer service department (see page 2).

# 3.8.2 Setup location

# **WARNING!**



Sudden movements and malfunctions! Crushing hazard.

The device is not suitable for operation in mobile facilities (ships, buses, trains). Adaptation of the unit is required in order to guarantee trouble-free operation when used in mobile facilities.

# **A** CAUTION!



Danger of overheating by obstruction of the air routing! Any liability is excluded in case of damage or injury proven to be the result of the use of non-genuine spare parts.

Use of non-compliant lamps voids warranty and risks injury!

- Do not change, obstruct or block the air inflow and outflow area to the device or make any unauthorized changes to the device. The manufacturer shall bear no liability for damage or injuries resulting from such actions.
- Observe the ventilation information to avoid serious system malfunctions.
- Before putting a device into operation, the transport pallet must be removed from under the device. Danger of overheating by obstruction of the air routing.
- Maintain the minimum distances from the walls! Dimensions are given on page 24.
- Only use OEM spare parts of the same type! The use of other parts will void the manufacturer's warranty!

#### **NOTICE**

#### Salty air! Contaminated air!

Device damage due to corrosion of the housing and electrical components.


- Do not install the device at swimming pools.
- Do not operate the device in locations with aggressive environmental conditions (e.g. air containing chlorine).

#### Damage to the device possible!

Where there are great differences in temperature between the transport route and the installation site the device may not be put into operation immediately after being set up.

Wait at least 2 hours before connecting the device to the power supply.

12/2016 1016257-02A Operating instructions – 15/80

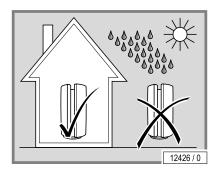

#### **NOTICE**

Damage to the device possible!

The device is not to be used outdoors.

#### **Environmental conditions**

- Optimum ambient temperature: Between 59 °F (15 °C) and 89 °F (32 °C)
- Storage temperature: Between 5 °F (-15 °C) and 140 °F (+60 °C)

Please contact the customer service department without fail before putting the device into operation - see page 2.

#### 3.8.3 Commissioning



# A DANGER!



Damaged mains power cable!

Danger to persons through electric shock or burns.

Only the manufacturer or specialist companies are permitted to replace the mains power cable.

Initial commissioning will be undertaken by the manufacturer's own service personnel or by authorized, trained and qualified staff. The device will be handed over ready for use.


As studio operator you are responsible for abiding by the electrical regulations applicable at the installation site.

The unit incorporates special preventive measures with regard to the electromagnetic compatibility and must be installed and commissioned according to the EMC instructions obtained from the assembly instructions.

If the device has not been used for a longer period of time, then it must first be inspected by our customer service department or by another authorized company before being put back into operation again.


# 3.9 Signs and stickers on the device

Signs which warn of danger areas or give important information on components are attached to the device. Ensure that the instruction signs are always clearly recognizable and easily legible. Any missing instruction signs or stickers must be replaced.

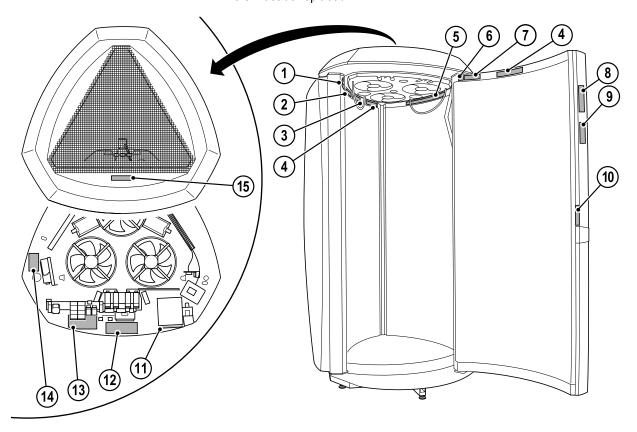

14563 / 1


#### 1: Name plate (example)

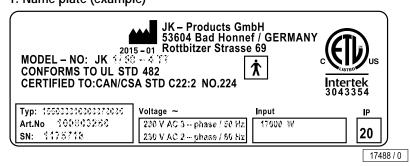

The name plate is attached to the interior side of the canopy. It contains important information for identifying the device (e. g. the serial number = Serial-No.) and the conformity mark.

12/2016 1016257-02A Operating instructions – 17/80

# 2: UDI plate (example)

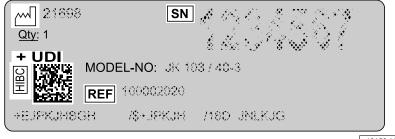

18153 / 0

#### 3: Standards

# THIS PRODUCT IS IN CONFORMITY WITH PERFORMANCE STANDARDS FOR SUNLAMP PRODUCTS UNDER 21CFR PART 1040.20

17292 / 0

4: Lamp cover base sticker (801139-..)

CAUTION - RISK OF PERSONAL INJURY

ATTENTION - RISQUE DE BLESSURE

UV LIGHT SOURCE - KEEP PROTECTIVE BARRIER IN PLACE

SOURCE DE RAYONS UV - NE PAS ENLEVER L'ECRAN

Keep protective barrier in place or replace removable parts after servicing. Ne pas enlever l'ecran protecteur ou remettre en place les pieces amovibles apres l'entretien.

801139-00a

17192 / 0

The sticker is mounted on the inner face of the door.

#### 5: Exposure label

#### DANGER OF ULTRAVIOLET RADIATION.

Follow all instructions. Avoid over-exposure as with natural sunlight. Over-exposure may cause eye and skin injuries, as well as allergic reactions. Repeated exposure may lead to premature aging of skin and skin cancer.

**MAXIMUM TANNING TIME: 9 MINUTES** 

	Recommended Exposure Schedule						
		Week 1	Week 2	Week 3	Week 4	Weekly	1 L
	Skin Type	1st - 3rd Sessions	4th - 6th Sessions	7th - 10th Sessions	11th - 15th Sessions	Subsequent Sessions	/
/	I - Sensitive	NOT ADVISED	NOT ADVISED	NOT ADVISED	NOT ADVISED	NOT ADVISED	[/
	II - Fair	2 Min.	3 Min.	5 Min.	7 Min.	9 Min.	`
	III - Average	2 Min.	3 Min.	5 Min.	7 Min.	9 Min.	] ,
	IV - Brown	2 Min.	5 Min.	7 Min.	9 Min.	9 Min.	
/	V - Dark Brown	2 Min.	5 Min.	7 Min.	9 Min.	9 Min.	

WEAR PROTECTIVE EYEWEAR! FAILURE TO DO SO MAY RESULT IN SEVERE BURNS OR LONG TERM INJURY TO THE EYES.

Certain medications or cosmetics may increase your sensitivity to ultraviolet radiation. Consult a physician before using sunlamps if you are using medications, have a history of skin problems or believe yourself to be especially sensitive to sunlight. If you do not tan in the sun, you are unlikely to tan from the use of this product.

This unit utilizes UV lamps. Replace only with **GENESIS VHP 12 Turbo Power 200W** 

or other recognized equivalents. To obtain the recommended exposure distance, stand on the specified marks on the footmat and close the door completely.

Warning: The use of any other position may result in overexposure!

Tanning can begin on a regular basis. A tan normally appears after several exposures and is maximized after four (4) weeks of exposure in accordance with the recommended exposure schedule for your skin type. In order to maintain your tan, a maximum of two (2) weekly 9 minute sessions is recommended from the fifth week onward.

Use protective eyewear (Super Sunnies®) whenever the unit is in operation. Read and follow the instruction booklet before using this product. To avoid electrical shock during maintenance, disconnect the unit from the power source. This product conforms with the performance standards for sunlamp products under 21 CFR 1040.20 , FDA.

Part No: 1005797-.

10995 / 2

The sticker is located inside the device.

6: Sticker 'Follow Operating Instructions' (1014232-..)



7: Sticker (1014367-..)

FOR SALES, SERVICE, LAMPS & LOTIONS

800.643.0086

www.jkamerica.com

1014367-00-

17197 / 0

# 8: Age warning label (1508746-..)

# ATTENTION: THIS SUNLAMP PRODUCT SHOULD NOT BE USED ON PERSONS UNDER THE AGE OF 18 YEARS.

17303 / 0

The sticker is located on the door.

#### 9: Warning sticker UV radiation (801140-..)

WARNING - ULTRAVIOLET RADIATION - FOLLOW INSTRUCTIONS - FAILURE TO USE PROTECTIVE EYEWEAR MAY RESULT IN SEVERE BURNS OR OTHER EYE INJURY - IF DISCOMFORT DEVELOPS, DISCONTINUE USE AND CONSULTA PHYSICIAN.

(I) As with natural sunlight, overexposure can cause eye injury and sunburn;

(II) Repeated exposure may cause premature aging of the skin and skin cancer;

(III) Medications or cosmetics applied to the skin, may increase sensitivity to ultraviolet light;

(IV)A person who does not tan in the sun most likely will not tan from the use of this device;

(V) A person who does not tan in the sun most likely will not tan from the use of this device;

(V) Overexposure should be avoided; and

(VII)Children, the elderly, or fair skinned people who always burn easily and either never tan or tan minimally should not use this equipment.

(VIII) The appliance is not allowed to be used by more than one person at the same time.

ATTENTION - RAYONNEMENTS ULTRAVIOLETS - VEUILLEZ SUIVER LES INSTRUCTIONS SUIVANTES - SANS DISPOSITIF DE PROTECTION DES YEUX, CE PRODUIT PEUT CAUSER DES BRULURES OU LESIONS CULAIRES GRAVES - EN CAS DE PROPLEME ARRETER L'UTILISATION ET CONSULTER LUM MEDECIN.

(I) Comma avec les rayons solaires naturels, une exposition frop longue peut causer coup de soleil ou brildure;

(II) L'utilisation de certains médicaments ou produits appliqués sur la peau peut accroître la senibilité aux untra-violets;

(V) Les personnes ne bronzant pas au soleil ne le feront probablement pas sur cet appareit;

(V) Toute personnes vant des problèmes de peau doit consulter un médecin avant toute utilisation;

(VI) Evit personnes aynd tes problèmes de peau doit consulter un médecin avant toute utilisation;

(VI) Evit personnes aynd tes problèmes de peau doit consulter un médecin avant toute utilisation;

(VI) Evit personnes aynd tes problèmes de peau doit consulter un médecin avant toute utilisation;

(VII) Est consellé aux enfants, aux personnes agées ou aux personnes a de la reau;

12076 / 1


# 10: OPEN sticker (1502710-..)



17517 / 0

The sticker is located on the door.


#### 11: Sticker ESD (85662-..)



17486 / 0


The sticker is mounted on several places in the device.

12: USA mains connection sticker (801046-..)

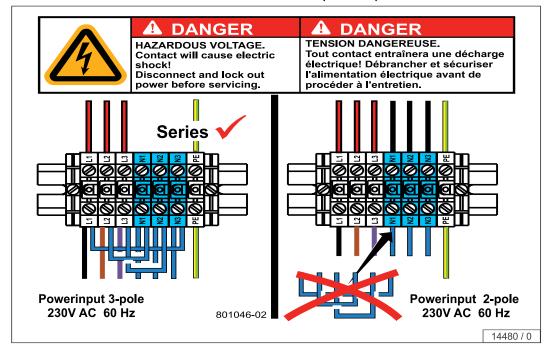

The sticker is located on the lid below the cover.

#### 13: Configuration of electronic components label (1502978-..)

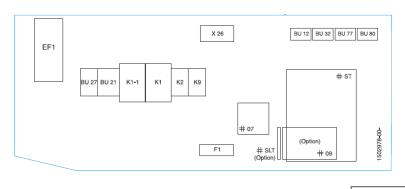

17518 / 0

The sticker is located on the lid below the cover.

12/2016 1016257-02A Operating instructions – 21/80

# 14: Controls label (1502983-..)



17519 / 0

The sticker is located on the lid below the cover.

# 15: Voltage is not switched off sticker (800698-..)



17516 / 0

The sticker is located on the cover

# 3.10 Technical data

# 3.10.1 Power rating, electrical specifications and noise level

Model-No.: JK 98 / 48-0				
Power consumption rating:	11,300 W			
Rated frequency:	60 Hz			
Rated voltage:	230 V 3 phase		230 V 2 phase	
Rated fuses:	40 amp 3-pole	or	70 amp 2-pole	
Classification:		Type BF applied part		
Ingress protection classification:		IP20		
Protection against electric shock:	Class I			
Max. allowed network impedance:	0.095 Ω			
Noise level inside the device:		70 dB(A)		
Noise level 1m away from device:		<71.6 dB(A)		
Load on the base plate:		max. 330 lb / 150 kg		
Weight:	approx. 1202 lb/545 kg			
Max. humidity:		< 70%		
Ambient temperature:		59-89 °F (15-32 °C)		
Max. operating altitude (above sea level):		< 6500 ft (2000 m)		





# NOTE:

Adaptation of the unit is required for operating altitudes greater than 6500 ft / 2000 m above sea level in order to guarantee trouble-free operation.

12/2016 1016257-02A

# 3.10.2 Dimensions

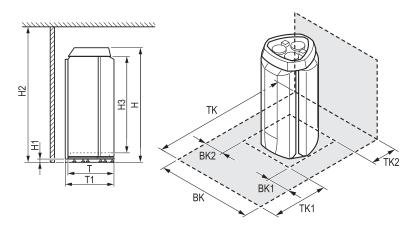

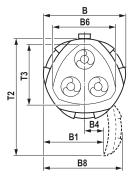

13735 / 0


B =	54 13/16 in	1,392 mm
B1 =	34 1/8 in	866 mm
B4 =	6 9/16 in	166 mm
B6 =	34 in	864 mm
B8 =	53 13/16 in	1,367 mm
T =	50 3/8 in	1,279 mm
T1 =	54 5/16 in	1,380 mm
T2 =	72 5/16 in	1,837 mm
T3 =	34 1/16 in	865 mm
H =	92 3/16 in	2,341 mm
H1 =	2 11/16 in	69 mm
H2 =	102 3/8 in	2,600 mm
H3 =	79 1/2 in	2,020 mm
BK =	76 3/16 in	1,935 mm
BK1=	19 11/16 in	500 mm
BK2 =	19 11/16 in	500 mm
TK =	94 1/2 in	2,400 mm
TK1 =	34 5/8 in	880 mm
TK2 =	11 13/16 in	300 mm

# 3.10.3 Lamp configuration

# **NOTICE**

The use of other UV lamps and filter panels voids the operating license!

Model-No.: JK 98 / 48-0

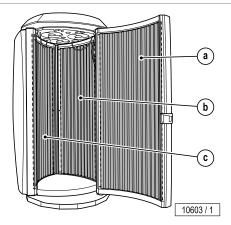


# Lamp set

1	Numbe	er Description	Length	Power	Control	Order-no.
a)	16	UV low pressure lamps GENESIS VHP12 Turbo Power 200 W	79 in 2.00 m	200 W	200 W	1508895
	16	Starter (80-225 W)				1503321
b)	16	UV low pressure lamps GENESIS VHP12 Turbo Power 200 W	79 in 2.00 m	200 W	200 W	1508895
	16	Starter (80-225 W)				1503321
c)	16	UV low pressure lamps GENESIS VHP12 Turbo Power 200 W	79 in 2.00 m	200 W	200 W	1508895
	16	Starter (80-225 W)				1503321

# 3.10.4 Accent lighting

Not applicable for this device.

# 3.10.5 Spare parts

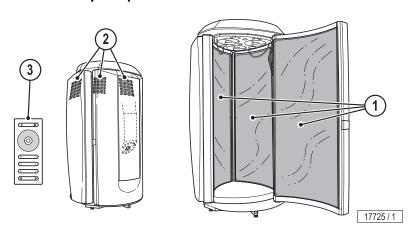

	Number	Description	Order-no.	
1	3	Acrylic panel		1014305
2	3	Filter		51937
3	1	Remote controller for LED Light Show		1509026
	3	Batteries 1,5 Micro (AAA)		1509205
	1	Protective goggles		84592
	1	MP3 cable		1001855
	1	Allen-key		83828

For more spare parts, contact Customer Service (see page 2).

# 4 Why you use it

# 4.1 Intended use

This sunlamp product is intended exclusively for cosmetic tanning of the human skin, for one person at a time, at the age of 18 or above.

# 4.2 Skin condition

You may benefit from the use of this device

- if you tan in natural sunlight (skin types III, IV and V),
- if you have no acute sunburn or skin disease,
- if you take no medication or use cosmetics that may increase sensitivity to ultraviolet light.

# Skin type I (Sensitive):

Invariably gets sunburn, accepts little natural sunlight and does not tan.



#### Skin type II (Fair):

Gets sunburn easily and severely, tans minimally or lightly and peels.



# Skin type III (Average):

Often referred to as "Average" complexion, gets moderate sunburns and tans about average.



#### Skin type IV (Brown):

Seldom gets sunburns, tans easily and above average with each exposure.

#### Skin type V (Dark Brown):

This individual's system rarely gets sunburns, tans easily and substantially.

12/2016

# 5 Who cannot use it

# 5.1 Prohibited usage

# 5.1.1 Tanning system/Beauty system





**UV** radiation

Danger of skin and eye injuries or skin diseases!

#### The following people must not use the device:

- People under 18 years of age
- People with skin lesions or open wounds
- People with acute sunburn
- People who repeatedly suffered from serious sunburn during childhood
- People with naturally red hair and pale skin
- People with atypically discolored patches of skin
- People who have or have had skin cancer
- People who suffer from an increased risk of skin cancer (e.g. cases of skin cancer in the family)
- People among whose closest relatives a melanoma has occurred
- People who are being medically treated for photosensitivity
- People taking photosensitivity causing medicine
- People with freckles and people who tend to develop freckles
- People with more than 16 moles on their body (2 mm diameter or larger)
- People with atypical moles (atypical moles are, for example, asymmetrical moles with a diameter greater than 5 mm, with varying pigmentation and irregular edges)
- Seek medical advice if in doubt!

# 5.1.2 Vibra Shape (vibration plate)

Information about the Vibra Shape feature can be found in the separate document 'OI Vibra Shape #1016215-..' which is provided in the Technical Documentation folder.

# 6 What you must do to avoid serious harm

# 6.1 General

# ↑ DANGER – HIGH VOLTAGE!



You can be killed or injured by an electric shock! Assembly and electrical connection must comply with national and local regulations.


 The device may only be assembled, installed, upgraded or repaired by authorized, trained and qualified staff.

# **A** WARNING



#### Risk of electric shock!

To avoid risk of electric shock, this equipment must only be connected to a mains supply with protective earthing.

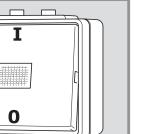

13156 / 0

The electrical installation must have a freely accessible, all-pole disconnecting device (Master switch with clearly labelled On/Off settings, e.g. '0' and 'l' or additional indicator light) fitted externally on the site side.

# ⚠ DANGER – HIGH VOLTAGE!



You can be killed or injured by an electric shock or injured by overexposure!

Skin damage and sunburn possible

Danger of overheating by obstruction of the air routing.

No modification of this equipment is allowed.

# 6.2 Tanning system

# **A** WARNING!



Unprotected tanning may result in eye injury and eye diseases!

The unprotected eye can become inflamed on the surface, and in certain cases the retina can be damaged by excessive radiation. Cataracts can form after repeated exposure to radiation.

Inform users to use the included protective goggles that block UV.

12/2016 1016257-02A Operating instructions – 29/80

# **A** WARNING!



Danger of ultraviolet radiation.

Ultraviolet radiation - follow instructions.

Failure to use protective eyewear may result in severe burns or other eye injury - if discomfort develops, discontinue use and consult a physician.

- As with natural sunlight, overexposure can cause eye injury and sunburn;
- Repeated exposure may cause premature aging of the skin and skin cancer;
- Medications or cosmetics applied to the skin, may increase sensitivity to ultraviolet light;
- A person who does not tan in the sun most likely will not tan from the use of this device;
- A person having a history of skin problems should consult a physician before use;
- Overexposure should be avoided; and
- Children, the elderly, or fair skinned people who always burn easily and either never tan or tan minimally should not use this equipment.
- The appliance is not allowed to be used by more than one person at the same time.

# **A** WARNING!



Danger of long-term consequences!

Exposure to ultraviolet radiation may increase the likelihood of developing skin cancer and cause serious eye injury. You do not need to become tan to make Vitamin D.

- Overexposure should be avoided.
- Children may not use this device.
- Seek medical advice if in doubt!

# 6.3 Sensor

Not applicable for this device.

# 7 What you must do to avoid other harm

# 7.1 General

# **A** WARNING!



Infections can be transferred through skin contact.

All items/equipment components, with which the user can come into contact during tanning, must be cleaned and disinfected after every tanning session:

- Protective goggles
- Base plate/floor mat (silicone)
- Acrylic panels
- Handles and control panel
- MP3 cable
- Use only EPA registered quaternary ammonium germicidal based detergent solution (follow product label for use-dilution), such as Lucasol One Step, to clean and disinfect the tanning system and its components.

# 7.2 Tanning system

# **A** WARNING!



Danger of long-term consequences!

- Overexposure should be avoided.
- The elderly should not use this equipment.
- Children may not use this device.
- While there is no immediate clinical evidence of UVA exposure and its effects upon expectant mothers, it is strongly advised that expectant mothers be discouraged from using the tanning unit.

# 7.3 Sensor

Not applicable for this device.

# 7.4 Vibra Shape - vibration plate - (additional feature)

Information about the Vibra Shape feature can be found in the separate document 'OI Vibra Shape #1016215-..' which is provided in the Technical Documentation folder.

12/2016 1016257-02A Operating instructions – 31/80

# 7.5 Foreseeable misuse

The following uses of the device are explicitly prohibited:

- Only one person at a time may use the device.
- People with body weight of more than 330 lb (150 kg) may not use the device.
- Exceeding the specified tanning times may result in burns and long-term skin damage.
- When the device is in use no other people may remain in the room. This
  includes both children and adults.

# 7.6 Obligations of the studio operator

- As the studio operator you are responsible for informing users on possible risks of tanning.
- All danger and safety labels attached to the device must be observed! Do not remove them!
- No safety equipment (e.g. panel switch) may be removed, deactivated, or otherwise bypassed as it can impair the safe operation of the device!
- The device may only be used when in completely operational condition!
- It is the studio operator's responsibility to ensure the tanning system is handled properly.

# 7.7 Staff training

As the operator you are obligated to train your personnel and instruct them in the established legal and accident prevention regulations. Ensure that your staff have understood and observe these instructions. This includes:

- information regarding intended use and foreseeable misuse
- safety instructions
- operating instructions
- cleaning/disinfection and maintenance instructions
- Please make the instructions and additional information from the manufacturer available to the staff at their workplace.
- Regularly check your staff's safety consciousness and awareness of the risks, taking into account your operating instructions.
- Please ensure that the cleaning/disinfection intervals are complied with, in particular cleaning and disinfection after every use.
- Please ensure that your staff provide your customers with appropriate advice, in particular regarding tanning times, possible risks and the operation of the device.

# 8 Risks of using this device

# **MARNING!**



Danger through ultraviolet radiation!

Danger of skin and eye injuries or skin diseases!

- This sunlamp product must not be used on individuals who have had skin cancer or have a family history of skin cancer.
- Persons repeatedly exposed to ultraviolet sunlamp products must be evaluated for skin cancer regularly.
- This sunlamp product must not be used by people among whose closest relatives a melanoma has occurred.

### Contraindications! The following people must not use this system:

- People under 18 years of age
- People with skin lesions or open wounds
- People with acute sunburn
- People who repeatedly suffered from serious sunburn during childhood
- People with naturally red hair and pale skin
- People with atypically discolored patches of skin
- People who have or have had skin cancer
- People who are being medically treated for photosensitivity
- People taking photosensitivity causing medicine
- People with freckles and people who tend to develop freckles
- People with more than 16 moles on their body (2 mm diameter or larger)
- People with atypical moles (atypical moles are, for example, asymmetrical moles with a diameter greater than 5 mm, with varying pigmentation and irregular edges)

12/2016

# 9 Benefits of using this device

This device serves the purpose of cosmetic tanning for one adult person with skin suitable for tanning.

Different tanning results can be achieved in varying strength tanning devices. This is due to the different strength UV lamps and the different UV-A and UV-B proportions of the UV radiation. The UV-A proportion primarily generates a superficial tan, which appears rapidly and is intensive but also fades more rapidly, the UV-B radiation is primarily responsible for more long-term tanning results.

#### Vibra Shape (additional feature)

Information about the Vibra Shape feature can be found in the separate document 'OI Vibra Shape #1016215-..' which is provided in the Technical Documentation folder.

# 10 How to decide to use this device

This device is intended only for commercial use and not for private use. Some people are not permitted to use the device, see chapter 5.

The device may not be used by people with reduced physical, sensory or mental capabilities or who have insufficient experience and/or knowledge without supervision. A person responsible for their safety must ensure, either by supervision or instruction, that the device is used correctly and safely. If there is any doubt, use of the device by such categories of persons is to be forbidden!

# 11 What to do before the treatment

Please check for any conditions that may prohibit the use of this device – see chapters 5, 6, 8, 10.

#### Make-up in the tanning device

Please do not wear make-up. Clean skin absorbs UV light better.

A wide variety of materials is found in cosmetics. Whether these are emulsifiers, greases, or fragrances - in conjunction with UV radiation, these can cause skin allergy reactions.

Remove all make-up. This is essential. Make-up clogs the pores in the face. The UV light from a tanning device re-opens these clogged pores so that not only does the light penetrate the skin, but also the allergenic components of the make-up.

A further negative consequence of make-up is that the appearance of the skin deteriorates irreversibly over a period of time. However good make-up looks - in conjunction with UV light, it causes more harm than good. Therefore remove all make-up before a session in your tanning device - it will be much better applied afterwards.

- Remove all jewelry (including piercings) prior to the application.
- Remove cosmetics before using the device and do not use sun screen products.

#### Are medications and the tanning device compatible?

It is known that some medications increase the skin's sensitivity to UV light. This probability is particularly high with antibiotics, sulphonamides, psychiatric drugs, tranquillizers, anti-diabetes treatments and diuretics. Sun creams which contain psorale or kumarin also increase skin sensitivity. If you are in any doubt, first ask your doctor - then you can enjoy the sun at no risk.

#### Contact lenses in the tanning device?

The answer is: Yes! Like any other tanning device user, contact lens wearers should also wear special protective goggles which protect the eyes against UV radiation. To guarantee better protection, wearers of glasses and contact lenses can ask their optician for exchange contact lenses with UV protection.

This will benefit tanning device users not only in the open air, but on the tanning device itself. You can wear these contact lenses on the tanning device without any restrictions. For more information, ask your optician or optometrist.

#### Showering after leaving the tanning device?

The browning is in the skin, not on it. Therefore you cannot wash it off. Treat your skin to a moisturizing cream after showering.

# 12 How to use this device

# 12.1 How to set this device up

After commissioning and cleaning/disinfection, the device is ready for operation.

See chapter 12.5.

# 12.2 How to make sure the device works

Before using the device, check for damage to acrylic panels.

# 12.3 How to use it to treat your condition

- No other persons are permitted in the vicinity of the cabin when using the device, this especially applies to children.
- UV light can cause irreversible skin or eye damage. The unprotected eye can become inflamed on the surface, and in certain cases the retina can be damaged by excessive radiation. Cataracts can form after numerous repeated tanning sessions. Use the UV-impermeable protective goggles provided (order no. 84592-..). Contact lenses and sun glasses are no substitutes for protective glasses.
- Always comply with the recommended application times.

# 12.4 How to choose correct treatment regimen

# 12.4.1 Skin types

### Skin type I (Sensitive):

Invariably gets sunburn, accepts little natural sunlight and does not tan.



#### Skin type II (Fair):

Gets sunburn easily and severely, tans minimally or lightly and peels.



#### Skin type III (Average):

Often referred to as "Average" complexion, gets moderate sunburns and tans about average.



#### Skin type IV (Brown):

Seldom gets sunburns, tans easily and above average with each exposure.

### Skin type V (Dark Brown):

This individual's system rarely gets sunburns, tans easily and substantially.

12/2016 1016257-02A

# 12.4.2 Tanning times



### NOTE:

The tanning times given in the table must not be exceeded!

### DANGER OF ULTRAVIOLET RADIATION.

Follow all instructions. Avoid over-exposure as with natural sunlight. Over-exposure may cause eye and skin injuries, as well as allergic reactions. Repeated exposure may lead to premature aging of skin and skin cancer.

**MAXIMUM TANNING TIME: 9 MINUTES** 

		Recomm	ended Exp	osure Sche	dule		
<i> </i>		Week 1	Week 2	Week 3	Week 4	Weekly	L
	Skin Type	1st - 3rd Sessions	4th - 6th Sessions	7th - 10th Sessions	11th - 15th Sessions	Subsequent Sessions	١,
/	I - Sensitive	NOT ADVISED	NOT ADVISED	NOT ADVISED	NOT ADVISED	NOT ADVISED	][
	II - Fair	2 Min.	3 Min.	5 Min.	7 Min.	9 Min.	`
	III - Average	2 Min.	3 Min.	5 Min.	7 Min.	9 Min.	
	IV - Brown	2 Min.	5 Min.	7 Min.	9 Min.	9 Min.	
/	V - Dark Brown	2 Min.	5 Min.	7 Min.	9 Min.	9 Min.	1

WEAR PROTECTIVE EYEWEAR! FAILURE TO DO SO MAY
7 RESULT IN SEVERE BURNS OR LONG TERM INJURY TO THE EYES

SO MAY
O THE EYES. GENESIS VHP 12 Turbo Power 200W

Certain medications or cosmetics may increase your sensitivity to ultraviolet radiation. Consult a physician before using sunlamps if you are using medications, have a history of skin problems or believe yourself to be especially sensitive to sunlight. If you do not tan in the sun, you are unlikely to tan from the use of this product.

or other recognized equivalents. To obtain the recommended exposure distance, stand on the specified marks on the footmat and close the door completely.

Warning: The use of any other position may result in overexposure!

Tanning can begin on a regular basis. A tan normally appears after several exposures and is maximized after four (4) weeks of exposure in accordance with the recommended exposure schedule for your skin type. In order to maintain your tan, a maximum of two (2) weekly 9 minute sessions is recommended from the fifth week onward.


Use protective eyewear (Super Sunnies®) whenever the unit is in operation. Read and follow the instruction booklet before using this product. To avoid electrical shock during maintenance, disconnect the unit from the power source. This product conforms with the performance standards for sunlamp products under 21 CFR 1040.20 , FDA.

Part No: 1005797-..

10995 / 2

The sticker is located inside the device.

# 12.5 How to operate the device

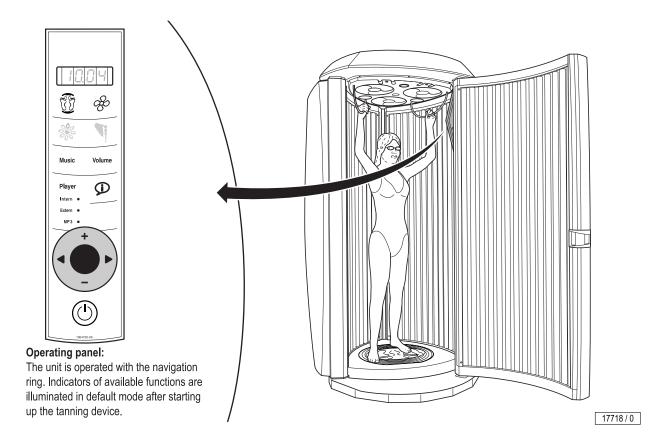


# 12.5.1 Control Center

Not applicable for this device.


# 12.5.2 User settings overview

Not applicable for this device.


# 12.6 Functions

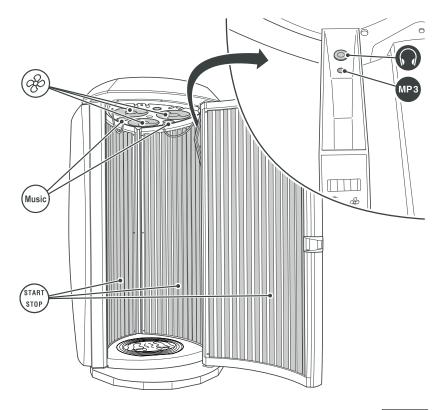

17719 / 0

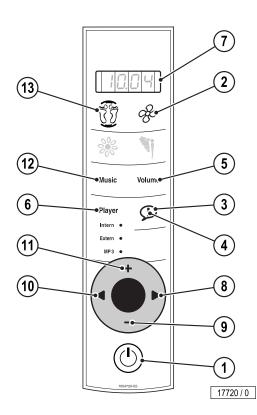

- 1. START/STOP button
- 2. Body cooling indicator
- 3. Voice Guide indicator
- 4. INFO indicator
- 5. Volume indicator
- 6. Audio system indicator 3D-Sound
- 7. LED Interior Light (additional feature)
- 8. Display Functions ...
- 9. Right navigation arrow button
- 10. Minus button
- 11. Left navigation arrow button
- 12. Plus button
- 13. Music indicator
- 14. Vibra Shape (additional feature) indicator

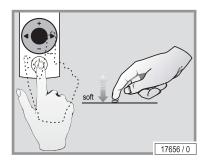

# 12.6.1 Navigation

The unit is operated with the navigation ring.



Switch tanning / vibration on and off, pause:

- Press briefly: Vibration plate will be switched off
- Press and hold down: Vibration plate and UV-lamps will be switched off



Select device function (go to pictogram)



e.g. Vibra Shape



Select sub-function (if available) Change setting

Pictograms of available functions are illuminated in default mode after starting up the tanning device. After selecting a function, the corresponding pictogram and the navigation ring flash for a short time. During this time settings may be changed.

# Operation - Demonstration mode

- Press until 0.00

The audio functions can be tested in demonstration mode. You have 30 seconds in which to select the function.

# 12.6.2 Description


	Function	Pictogram selection / Button sequence	Description / Display	Information
1.	UV lamps		START/STOP Switches the UV lamps on / off during the tanning session	The tanning time continues to run if the UV lamps are switched off during tanning session.
2.	Body cooling	$\textcircled{10} \textcircled{10} \textcircled{10} \bigcirc   \oplus$	Regulate body cooling, levels 1-9	
5.	Volume	<b>●</b> / <b>●</b> Volume <b>○</b> / <b>+</b>	Adjusting the volume	
		<b>●</b> / <b>●</b> Volume <b>●</b>	Tone off: Press button <sup>(□)</sup> until displayed <sup>(□)</sup> until	
3.	Voice Guide		Switching Voice Guide off	Voice Guide provides an acoustic aid when running the unit and is
		$\bigcirc \bigcirc $	Switching Voice Guide on	only available in conjunction with 3D sound.
				Voice Guide is switched on by default during standby and during tanning.

12/2016 1016257-02A Operating instructions – 41/80

	Function	Pictogram selection / Button sequence	Description / Display	Information
6.	Audio system	<b>●</b> / <b>●</b> Player ⊝/⊕	Selecting the audio system (channel)	
		Player —/⊕ Intern ●	I - [H] Internal: Music SD card	
		<b>●</b> // <b>●</b> Music ○/(+)	Select title Fr.01 - Fr.99	
		Player ⊝/⊕ Extern ●	E - [H] External: Externally connected systems, e.g. CD player	
	E - [H]	<b>●</b> / <b>●</b> Music ○/⊕	Select channel	Refer to 'Presettings', Order-no. #1011803
		Player ⊝/⊕ MP3 •	— P ∃ — MP3 player or smartphone	
4.	INFO	$\bigcirc / \bigcirc \bigcirc \bigcirc \oplus$	Switch INFO on: InFo	General information about the device.
		$\bigcirc \bigcirc \bigcirc \bigcirc$	Select INFO text	
			Switch INFO off: Hold the button	
13.	Vibra Shape	$ \bigcirc   \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc $	Select Vibra Shape	
			<ul> <li>Tip the button once: Vibration plate will be switched off</li> <li>Hold the button: Vibration plate and UV lamps will be switched off</li> </ul>	START/STOP also switches off the UV lamps.
			Program 1	
			Program 2	
			Program 3	
			Program 4	

# **LED Light Show**


Using the supplied remote control (1509026-..) the color gradient and brightness of the LED Light Show, for example, can be altered.

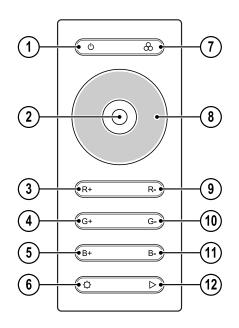

Position	Description
1	ON/OFF
2	Display
3	Short press: switch on red channel Long press: dim up
4	Short press: switch on green channel Long press: dim up
5	Short press: switch on blue channel Long press: dim up
6	Brightness
7	For Warm white, Natural white, Cool white changing. (Through the three RGB color mixing)
8	Color wheel
9	Short press: switch off red channel, Long press: dim down
10	Short press: switch off green channel, Long press: dim down
11	Short press: switch off blue channel, Long press: dim down
12	Play & pause button. There are 10 build-in modes.

Short press it will play, short press again, it will pause. Long press it will speed up/down.

17655 / 0

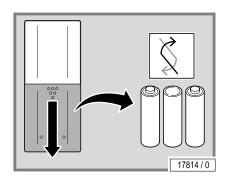

# Remote control: Replacing the batteries

- Open: push cover downward.
- Remove used batteries, insert new ones.
- Close: push cover upward.

# 12.7 Operating display of the sensor

Not applicable for this device.

12/2016 1016257-02A

# 12.8 Selection of the application

### Vibra Shape (additional feature)

Information about the Vibra Shape feature can be found in the separate document 'OI Vibra Shape #1016215-..' which is provided in the Technical Documentation folder.

# 12.9 Sun Select setting with the outer interface

Not applicable for this device.

# 12.10 Measurement (automatic mode)

Not applicable for this device.

# 12.11 Connections

MP3 player and smartphone

# **WARNING!**



WARNING!


### Danger of hearing damage!

Using earphones or headphones at high volume can result in permanent hearing damage.

Do not set the volume too high.


The user can connect their own private MP3 player or smartphone to the device.


- 1. Jack plug (JK Part # 4630911001-..) provided for use by the studio operator (2 x 3.5 mm stereo jack plug).
- 2. MP3 player or smartphone connection: see the documentation from the manufacturer of the MP3 player or smartphone.

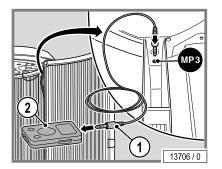


### Connecting:

- Insert the MP3 cable (stereo jack plug) in the audio system.
- Plug the MP3 cable into the MP3 player or smartphone.
- Select the music title and then start.
- Where necessary, set the volume level on the MP3 player or smartphone so that the sound signal from the MP3 player or smartphone is recognized by the audio system.

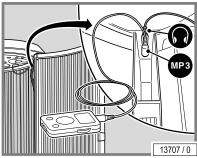

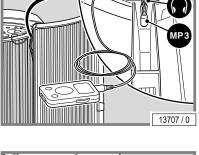

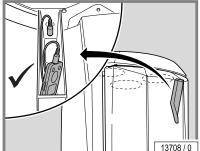





The heat might damage your MP3 player or smartphone!

Do not place the unit directly in the radiation area.

The cable might tear, the connectors might be damaged.

Do not pull on the cable when unplugging the MP3 player or smartphone.



# NOTE:

The personal use of an MP3 player during tanning is not a public broadcast in copyright terms, so that there is no obligation for registration or payment by the studio owner to the corresponding copyright owning company. Copy right laws apply to the owner of the MP3 player.

The same regulations apply for the official use of MP3 music files as for other music sources: As studio owner you are only allowed to use original audio obtained from legal sources. Proof of the legitimacy of any MP3 audio used should be available for viewing upon demand of any regulatory body. Please refer to http://www.riaa.com for more information.

12/2016 1016257-02A

# 12.12 How to use



### NOTE:

Before use the device must always be cleaned and disinfected! See chapter 12.15 How to clean/disinfect.

# 12.12.1 How to start

The device is started automatically with an internal or external timer.



#### NOTE:

See separate document 'Timer Control Module' #1008370-... in the Technical Documentation folder.

# Preparation time

Before the UV lamps turn on, you have a few minutes to prepare yourself. During the preparation time you can switch on the UV lamps at any time by pressing the START/STOP button .


- Remove your clothes and all jewelry.
- Remove make-up and other cosmetics.
- Remove glasses. Contact lenses can be worn under the protective goggles.
- Put on the protective goggles.
- Close the door.
- Stand upright in the center of the tanning system.
- Press the START/STOP button.

# Settings on start-up:

- UV lamps
- Body cooling
- Face cooling
- Audio system
- Voice Guide



# 12.12.2 Application tips

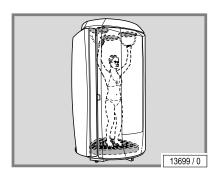






# Sunburn and skin damage due to burns!


Insufficient clearance between the UV lamps and the surface of the skin leads to sunburn and skin damage.

- Stand upright and straight during the tanning and in the center of the unit.
- Use the handles to make holding up your arms easier so that your body gets an even tan.

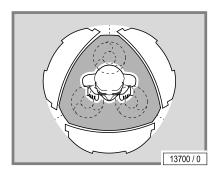

# Vibra Shape (additional feature)

Information about the Vibra Shape feature can be found in the separate document 'OI Vibra Shape #1016215-..' which is provided in the Technical Documentation folder.

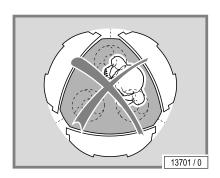

# 12.12.3 How to stop

The tanning session ends automatically after the preset time has run down. The internal body cooling fan continues to run for approx. three (3) minutes to sufficiently cool the device.

- To interrupt a tanning session, press and hold button START/STOP anytime during a session.
- Press START/STOP again to restart the lamps.

12/2016 1016257-02A Operating instructions – 47/80

# 12.13 What to do after the treatment

# 12.13.1 Cleaning and disinfection

# **A** WARNING!



Infections can be transferred through skin contact.

All items/equipment components, with which the user can come into contact during tanning, must be cleaned and disinfected after every tanning session:

- Protective goggles
- Base plate/floor mat (silicone)
- Acrylic panels
- Handles and control panel
- MP3 cable
- Use only EPA registered quaternary ammonium germicidal based detergent solution (follow product label for use-dilution), such as Lucasol One Step, to clean and disinfect the tanning system and its components.



#### NOTE:

For thorough cleaning and disinfection, the product must be allowed to remain in contact with the surface being cleaned and disinfected for a specified amount of time.

This specified amount of time depends on the cleaner/disinfectant which is used. Follow the directions for use of the cleaner/disinfectant.

After this specified application time remove remaining cleaner/disinfectant from the surfaces of the device. Use a singlepass paper towel.


# 12.14 Safety instructions for cleaning/disinfection and maintenance

# 🚹 DANGER – HIGH VOLTAGE!



You can be killed or injured by an electric shock! During maintenance and service work there is a risk of touching live parts and receiving a fatal electric shock.

- The device must not be in use.
- Disconnect device from power supply before opening.
- Do not reach behind covers and do not open the device with the device switched on.
- Refit any safety devices (e.g. switches) after the work has been completed.

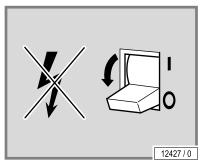

12428 / 0

If work is to be performed on the devices, they must be deenergized. That means that all live cables must be switched off.

Switching off the device alone is insufficient, as certain points may remain energized. Therefore, switch off fuses before performing any work and – if possible – remove them.

Accidental reactivation can result in serious accidents. Immediately after deenergizing, secure all switches or fuses used for deenergizing against being switched on again.

Lock the fuse box with a padlock.

In case of circuit breakers which cannot be unscrewed, a strip of adhesive tape may be applied over the actuation lever (1 + 2) with the wording 'Do not switch, danger!'.

A prohibition sign with the text:

'Work in progress!'

'Place: .....'

'Sign may only be removed by: ...........'

must always be securely mounted immediately.

It is imperative that you, the owner and/or operator, check all components for any signs of wear which may occur through normal use.

- Observe the cleaning/disinfection and maintenance schedule specified in the tables in Chapter 12.14 and 12.16.2.
- Only replace UV low-pressure lamps with the original type or compatible lamps.

Should you require any assistance or need additional information, please call Global Service USA at 800 445 0624, Monday through Friday 8:00 a.m. - 7:00 p.m. CT, Saturday 8:00 a.m. to 3:00 p.m.



#### NOTE:

The service of the device may only be carried out by authorized, trained and qualified staff.

12/2016 1016257-02A

# **A** WARNING!



Injuries and damage due to improper maintenance!

If the maintenance intervals for the UV lamps are exceeded or incompatible UV lamps are installed, the share of harmful UVB radiation may increase. Sunburn and other skin damage may result.

Improper maintenance can cause the device to be damaged or to become unusable.

- Always comply with the specified maintenance intervals, see chapter 12.16.2 Maintenance plan.
- Follow the cleaning/disinfection instructions.

# Danger of burns from hot lamps and device parts! If the tanning device was operated before being switched of

If the tanning device was operated before being switched off and opened, lamps and housing parts may be hot.

 Before replacing lamps or other spare parts, wait until lamps and metal parts of the device have cooled down sufficiently.

### Danger of squeezing!

When opening and closing the panels and acrylics, you can squeeze your fingers.

Maintenance and care play a major role in deciding the devices performance and appearance over its useful life. Diligent compliance at the specified intervals is absolutely necessary to ensure the proper operation of your device.

The current operating hours of the parts requiring maintenance can be displayed in the Presetting mode – see separate instructions 'Presettings' #1011803-.. in the Technical Documentation folder.

Please note that the device must be inspected regularly by a JK authorized representative every 12 months (from date of installation) to maintain its proper condition!

# 12.15 How to clean/disinfect

# **WARNING!**



Infections can be transferred through skin contact.

All items/equipment components, with which the user can come into contact during tanning, must be cleaned and disinfected after every tanning session:

- Protective goggles
- Base plate/floor mat (silicone)
- Acrylic panels
- Handles and control panel
- MP3 cable
- Use only EPA registered quaternary ammonium germicidal based detergent solution (follow product label for use-dilution), such as Lucasol One Step, to clean and disinfect the tanning system and its components.



#### NOTE:

For thorough cleaning and disinfection, the product must be allowed to remain in contact with the surface being cleaned and disinfected for a specified amount of time.

This specified amount of time depends on the cleaner/disinfectant which is used. Follow the directions for use of the cleaner/disinfectant.

After this specified application time remove remaining cleaner/disinfectant from the surfaces of the device. Use a singlepass paper towel.

# 12.15.1 Cleaning and disinfection of surfaces

### Acrylic panel

#### **NOTICE**

Do not rub with a dry cloth - danger of scratching!

 Other cleaning agents, especially concentrated disinfectants or solvents (e.g. Lysoform, ethyl alcohol or other liquids containing alcohol) must never be used for cleaning. Failure to observe this voids all warranty claims.

Acrylic panels (6) referenced in section 12.15.2 'Cleaning/disinfection plan'

These panels are not in direct contact with the user, however they can become soiled if the user inadvertently touches them. If these panels are left soiled for an extended period of time, the heat and light from the tanning lamps may cause the soiled areas to become permanently stained. Therefore we recommend frequently inspecting and cleaning these panels when necessary, to ensure the serviceable life of the acrylic.

Remove fingerprints and other soiling carefully.

#### Plastic surfaces

For cleaning the remaining painted and unpainted plastic surfaces, it is best to simply use warm water and commercially available soft chamois leather. Never use aggressive cleaning agents containing alcohol or essential oils. These may lead, in the long run, to damages not covered by the warranty. During cleaning a slight discoloration of the leather cloth by the rubber seals should be expected for production-related reasons.

Prevent damage to the acrylic glass and plastic surfaces.


Remove rings, watches, bracelets etc. before starting cleaning work.



#### Lamps

 Low pressure lamps can be cleaned with a damp cloth (without additional cleaning agents) where necessary.

# 12.15.2 Cleaning/disinfection plan

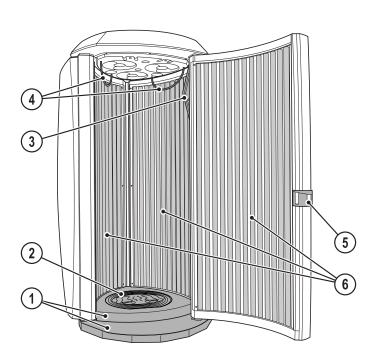



17721 / 0

	Component	Interval		Activity	See page
		After each tanning session	When necessary		
1	Entry area	Χ		Cleaning and disinfection	48
2	Foot mat (Silicone)	Χ		Cleaning and disinfection	48
3	Control panel	Χ		Cleaning and disinfection	48
4/5	Handle	Χ		Cleaning and disinfection	48
	Protective goggles	Χ		Cleaning and disinfection	48
	MP3 cable	Χ		Cleaning and disinfection	48
7	Surfaces		Χ	Clean	52
6	Acrylic panels		Χ	Clean	52
8	Filter		Χ	Remove and clean filter	61



# NOTE:

If desired, you may set the unit to require that cleaning/disinfection be confirmed after each tanning session by pressing the START/STOP button (when the cool-down time for the main fan has finished).

# 12.16 How to maintain

# 12.16.1 Technical modifications

The device has been constructed in accordance with current safety regulations. The illustrations and specifications on these instructions are subject to technical modifications which are required in order to improve the device.

Unauthorized modifications and changes to the device and its control unit are prohibited.

Use only OEM spare parts.

# 12.16.2 Maintenance plan



#### NOTE:

The service of the device may only be carried out by authorized, trained and qualified staff.


#### **NOTICE**


Only use OEM spare parts of the same type! The use of other parts will void the manufacturer's warranty!

Any liability is excluded in case of damage or injury proven to be the result of the use of non-genuine spare parts.

The following maintenance activities shall be performed by the studio operator.

# Maintenance performed by the studio operator

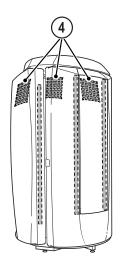

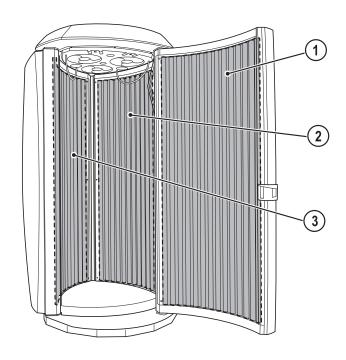

17722 / 0

	Component	Interva			Activity	See page
		When necessary	300 h	1000 h		
1, 2, 3	UV low pressure lamps			Χ	Replace	60
1, 2, 3	Starter door/side walls			Χ	Replace	60
4	Filter	Χ	Χ		Clean	61

# Maintenance performed by authorized, trained and qualified staff

In addition to the maintenance plan on page 54, the following items should be checked to ensure safe operation and use of your tanning system.

	Component	Interval <sup>1</sup>					Activity
		500 h / 6 months	1000 h / 1 year	2000 h / 1 year	5000 h / 5 years	10000 h / 10 years	
1	Bolts, fasteners, bushings of the door hinge mechanism			Χ			Inspect and replace as necessary
	Bolts, fasteners, bushings of the door hinge mechanism				Χ		Replace
2	Door wiring			Χ			Inspect and replace as necessary
	Door wiring				Χ		Replace
3	Chassis and associated fasteners			Χ			Inspect and replace as necessary
	Chassis and associated fasteners					Χ	Replace
4	Wiring and associated plugs / terminal connections			Χ			Inspect and replace as necessary
5	Acrylic panels <sup>2</sup>	Χ					Inspect and replace as necessary
	Acrylic panels <sup>2</sup>			Χ			Replace
6	Electrolytic capacitors					Χ	Replace
7	Conductors					Х	Replace

<sup>&</sup>lt;sup>1</sup>Interval must be repeated after each inspection or replacement (i.e. 1st: 3 months, 2nd: 6 months, 3rd: 9 months, etc.)

<sup>&</sup>lt;sup>2</sup>The schedule for acrylic replacement listed refers only to the condition of the acrylic relating to safety and does not address the efficacy of UV transmission.



#### NOTE:

If the device is in service for longer than 10 years, it must be completely overhauled by a trained service technician.

# 12.16.3 Cleaning and maintenance work preparation

Not applicable for this device.

# 12.16.4 Instructions for replacing the lamps

# **WARNING!**



Danger of burns from hot lamps and device parts!

If the tanning device was operated before being switched off and opened, lamps and housing parts may be hot.

 Before replacing lamps or other spare parts, wait until lamps and metal parts of the device have cooled down sufficiently.



#### NOTE:

Small quantities of mercury can escape if the bulb/lamp glass breaks!

Please comply with the following instructions:

- Immediately disconnect the device from the mains power.
- Children must leave the room immediately.
- Ventilate the room for at least 15 minutes.
- Put on disposable gloves.
- With the window open: Collect the glass shards and escaped mercury in a sealable container.
- Take the container to a collection site for waste lamps.

### Changing the chip card

Not applicable for this device.

12/2016

# Low pressure lamps


# **A** WARNING!




Danger of burns from hot lamps and device parts!

If the tanning device was operated before being switched off and opened, lamps and housing parts may be hot.


- Before replacing lamps or other spare parts, wait until lamps and metal parts of the device have cooled down sufficiently.
- Replace faulty UV low pressure lamps immediately.
- Always replace the entire set of lamps after the specified operating time.
- Turn 90° and carefully remove from the socket.

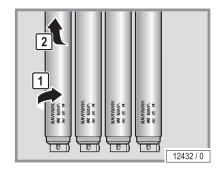


UV low pressure lamps possess a reflector which directs the light outwards. The lamps must be mounted in such a way that the rear side of the reflector is located on the device side.

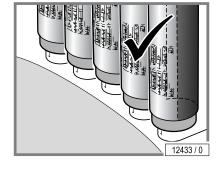

Push the pins vertically into the socket from above.

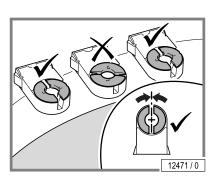

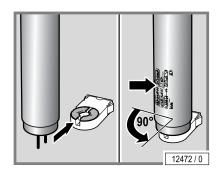

Turn the lamp 90°.

The lettering must be oriented towards the outside (i.e. towards the tan-

### Makrolon tubes

Not applicable for this device.

#### Starter

Replace faulty starters immediately.


ning room or towards the user).

You can recognize a faulty starter by the blackened ends of the lamps or when the lamps can no longer be started.

Operating a lamp with a faulty starter significantly shortens its service life. The lamp loses power and may begin to flicker under certain circumstances.

The starters are located in either one of the two lamp sockets or are visible when the lamps are removed.

- Turn 90° and carefully remove from the socket.

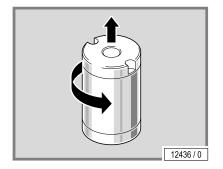

# High pressure lamps and filter panels

Not applicable for this device.

# 12.16.5 Cleaning and disinfection of the sensor

Not applicable for this device.


# 12.16.6 Cleaning or replacing UV lamps in the door

#### NOTICE

# Acrylic panels unusable due to soiling!


Soiling on the panels is burned in by the hot lamps and results in the long term in unserviceable panels.

Remove fingerprints and other soiling carefully.

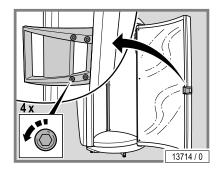

### Door handle:


Remove the screws and remove door handle.

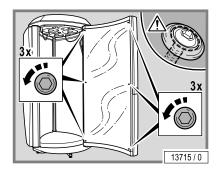

This work step is not applicable on devices with privacy shield.

# Acrylic panel:


- Remove the screws.
- Remove the acrylic panel and carefully lay it aside.

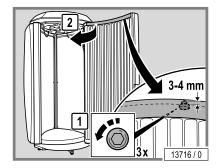

# Upper lamp cover:

- Loosen screws 2/16 in (3-4 mm).
- Take off the lamp cover.

Replacing lamps: see page 58. Replacing starters: see page 59.

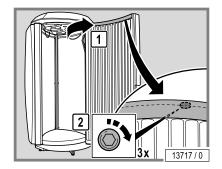

The assembly is the same process in reverse order.

# 12.16.7 Cleaning or replacing UV lamps and filter panels on the side walls

### **NOTICE**

# Acrylic panels unusable due to soiling!

Soiling on the panels is burned in by the hot lamps and results in the long term in unserviceable panels.


Remove fingerprints and other soiling carefully.



#### NOTE:


There is a risk of damage being caused to the acrylic panels and the cockpit control and the side walls!

- Observe the order: First remove the acrylic cover on the left and then the one on the right.
- Do not knock the right acrylic panel against the cockpit control when removing it.

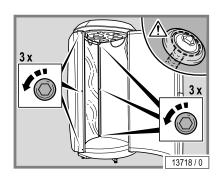

First remove the left acrylic panel:


- Remove the screws.
- Remove the acrylic panel and carefully lay it aside.

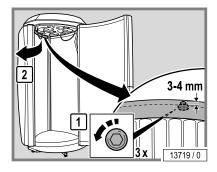

### Upper lamp cover:

- Loosen screws 2/16 in (3-4 mm).
- Take off the lamp cover.


Replacing lamps: see page 58. Replacing starters: see page 59.

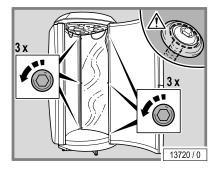


### Right acrylic panel:

Remove the screws.


12/2016

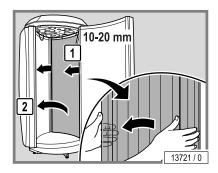

 The panel must be taken out past the cockpit control. Ensure that you do not scratch the panel.

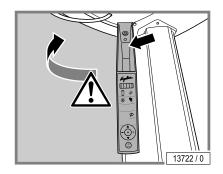


 Carefully pull the panel past the back of the cockpit control and remove to the left.

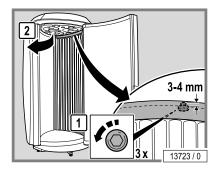

# Upper lamp cover:

- Loosen screws 2/16 in (3-4 mm).
- Take off the lamp cover.

Replacing lamps: see page 58. Replacing starters: see page 59.

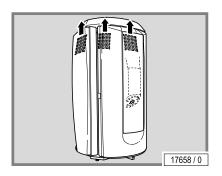

### Clean the filter:

Push the filter out to the top.

The assembly is the same process in reverse order.

When assembling the device please note:

Always replace the right acrylic panel first.

# 12.16.8 Cleaning or replacing UV lamps and filter panels in the canopy

Not applicable for this device.

# 12.16.9 Cleaning or replacing the UV lamps and filter panels in the shoulder tanner

Not applicable for this device.

# 12.16.10 Cleaning or replacing Ambient Light

Not applicable for this device.

# 12.16.11 Cleaning or replacing the canopy accent lighting

Not applicable for this device.

# 12.16.12 Cleaning or replacing the front panel accent lighting

Not applicable for this device.

# 12.16.13 Cleaning the filters in the base

Not applicable for this device.

# 12.16.14 Cleaning the canopy filter mats

Not applicable for this device.

# 12.16.15 Cleaning the filter mats in shoulder tanner

Not applicable for this device.

# 12.16.16 Air conditioning: Empty the condensation tank and clean the filter

Not applicable for this device.

# 12.16.17 AQUA / AROMA SYSTEM maintenance


Not applicable for this device.

#### Changing the AROMA canister

Not applicable for this device.

#### Replacing the AQUA SYSTEM canister

Not applicable for this device.

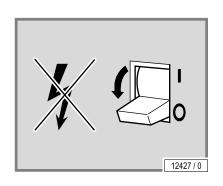

# 12.17 How to store the device

# 12.17.1 Decommissioning

The device must be disconnected from the power supply in order to temporarily or permanently decommission it.

You must abide by the legal disposal requirements when permanently decommissioning the device.

# 12.17.2 Storage

Store the devices in a dry, frost-free location with a stable temperature. Once the device has cooled off, pack it in plastic wrapping to protect it against scratches.

• Storage temperature: Between 5 °F (-15 °C) and 140 °F (+60 °C)

# 12.17.3 Disposal

# Environmental regulations – disposal of lamps and batteries

UV lamps contain fluorescent materials and other waste containing mercury. Batteries contain heavy metal compounds.

Dispose of UV lamps and batteries according to the national waste disposal laws and in accordance with the municipal waste regulations.

# Packaging


All packaging consists of 100 % recyclable materials.

### Disposal of old devices

The device has been manufactured using recyclable materials. The JK Corporate Group will provide you with information on the content or potential hazards of the materials used.

### Disposal of consumable supplies

Dispose of AQUA SYSTEM and AROMA containers and their contents according to the national waste disposal laws and in accordance with the municipal waste regulations.

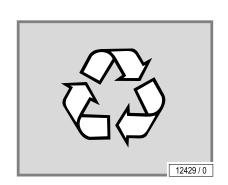

# 13 What to do when things go wrong

# **A** WARNING!



#### Follow instructions!

Failure to use protective eyewear may result in severe burns or other eye injury. If discomfort develops, discontinue use and consult a physician.

- UV devices must not be used without taking medical advice if unexpected effects, such as itching, occur within 48 hours of the first session.
- The tanning device must never be used if a filter panel is missing or damaged, or the timer is defective!
- UV light from the sun or UV systems can cause injuries to the skin or eyes. This biological effect is dependent on the sensitivity of the individual's skin and on the type and amount of UV light.
- As with natural sunlight, overexposure can cause eye and skin injury, sunburn, and allergic reactions.
- Medications (taken internally or otherwise) or cosmetics applied to the skin, may increase sensitivity to ultraviolet light.
- A person having a history of skin problems should consult a physician before use.

# - Seek medical advice if in doubt!



#### NOTE:

Occasionally, persons using the tanning device will experience a slight reddening of the skin – usually in small patches – after the second or third session. This redness is often accompanied by an itching sensation. This may be nothing more than a very limited heat 'rash' caused by heat from the lamps within the device. It should go away within approximately 24 hours and should not reappear. This rashing can be lessened or prevented by applying moisturizer lotion to the affected area after the tanning session is completed.

- Follow instructions.
- The time between the first two tanning sessions must be at least 24 hours.
- Increasing tanning also requires an extension of the
  exposure time (= radiation time) or after a certain degree
  of tanning has been achieved, a further intensification is
  not possible. However, the radiation time may not be extended as desired within the scope of the permissible radiation doses! Therefore, only a certain degree of final
  tanning dependent on the skin type can be achieved
  without endangering your health.
- Inform users about proper tanning.

# 13.1 Troubleshooting

Software and device malfunctions are indicated by error codes, e.g. E005.

These error codes are output to the display to simplify troubleshooting:

- If a fault occurs, the error code flashes on the display.
- If several errors occur, the error messages are displayed alternately.
- Error elimination is acknowledged by pressing the START/STOP button.
- If the error cannot be cleared, contact Customer Service (see page 2) or your local service provider

More detailed information regarding the error description and solutions is available in the document 'Error Codes' #1011831-.., which you find in the Technical Documentation folder.

For authorized, trained and qualified staff:

For further technical description, please contact Custer Service (see page 2).

# **A** WARNING!



Danger of skin injuries and skin diseases.

 The tanning device must never be used if a filter panel is missing or damaged, or the timer is defective!

# 14 Where you can find out more

If you have any questions, please contact Customer Service (see page 2).

# 15 How we studied this device

The system is built to the state of the art and the applicable safety regulations.

We reserve the right to make technical changes which are necessary to improve the system or a system component even if they deviate from pictures and information in these instructions.

# 16 Appendix

# 16.1 Model-No.: JK 98 / 48-0: EMC information

# 16.1.1 Table 201: Guidelines and manufacturer's declaration – Electromagnetic emissions

The tanning system has been designed for use in the electromagnetic environment specified below. The device operator must ensure that it is used in such an environment.

Emission measurements	Conformity	Electromagnetic environment – Guidelines
HF emissions as per CISPR 11	Group 1	Model-No.: JK 98 / 48-0 uses HF power solely for internal functions. Therefore the HF emissions are very low and it is highly unlikely that it will cause any interference to adjacent electronic equipment.
HF emissions as per CISPR 11	Class B	Model-No.: JK 98 / 48-0 has been designed for use in all devices, including those in residential areas, and it has been determined that it can be used for residential purposes as soon as it is connected up to a public mains supply that also supplies buildings.
Harmonics IEC 61000-3-2	Class A	
Voltage fluctuations / Flicker IEC 61000-3-11	Fulfilled	The obligations listed in Sub-section 6.2.2 of EN 61000-3-11:2000 must be taken into consideration. In particular, the 0.14 ohm line impedance must be guaranteed for pulse massaging.

# 16.1.2 Table 202: Guidelines and manufacturer's declaration – Electromagnetic interference

The tanning system has been designed for use in the electromagnetic environment specified below. The device operator must ensure that it is used in such an environment.

Interference immunity tests	IEC 60601 - Test level	Defined level	Electromagnetic environment – Guidelines
Discharging static electricity (ESD) IEC 61000-4-2	±6 kV contact discharge ±8 kV air discharge	±6 kV contact discharge ±8 kV air discharge	-
Fast transient electrical noise / bursts IEC 61000-4-4	±2 kV for mains supplies	±2 kV for mains supplies	-
Surges 61000-4-5	±1 kV series mode voltage ±2 kV common mode voltage	±1 kV series mode voltage ±2 kV common mode voltage	-
Magnetic field radiated by supply frequency (50/60 Hz) IEC 61000-4-8	/ 3 A/m	3 A/m	-
Voltage drops, Short interruptions and supply voltage fluctuations IEC 61000-4-11	<5% $U_T$ (>95% drop in $U_T$ ) for 0.5 periods 40% $U_T$ (60% drop in $U_T$ ) for 5 periods 70% $U_T$ (30% drop in $U_T$ ) for 25 periods <5% $U_T$ (>95% drop in $U_T$ ) for 5 s	<5% $U_T$ (>95% drop in $U_T$ ) for 0.5 periods 40% $U_T$ (60% drop in $U_T$ ) for 5 periods 70% $U_T$ (30% drop in $U_T$ ) for 25 periods <5% $U_T$ (>95% drop in $U_T$ ) for 5 s	-

Note:  $U_T$  is the mains alternating voltage used for the test levels.

# 16.1.3 Table 204: Guidelines and manufacturer's declaration – Electromagnetic interference

The tanning system has been designed for use in the electromagnetic environment specified below. The device operator must ensure that it is used in such an environment.

Interference immunity tests	IEC 60601 - Test level	Defined level	Electromagnetic environment – Guidelines
			Portable and mobile radios are not to be used at shorter distances to the Model-No.: JK 98 / 48-0 and its cables other than the recommended safe distance, which has been calculated according to the transmitting frequency are made.
			Recommended safe distance:
			$d = 1.2\sqrt{P}$
			$d = 1.2\sqrt{P}$ 80 MHz to 800 MHz
Conducted	3 Vrms	3 Vrms	$d = 2.3\sqrt{P}$ 800 MHz to 2.5 GHz
HF noise IEC 61000-4-6 Radiated	150 kHz to 80 MHz	3 V/m	P is the transmitter's maximum output power (nominal rating) in Watts (W) according to the details provided by the manufacturer of the transmitter and the recommend safe distance is given in metres (m).
HF noise IEC 61000-4-3	3 V/m 80 MHz to 2.5 GHz	3 V/III	The field strength of the stationary radio transmitter is for all frequencies <sup>b</sup> in accordance with tests that were carried out onsite <sup>a</sup> less than the determined level.
			Interference is possible in the immediate surrounding of equipment that carry the following symbols.

Comment 1: The higher value applies to 80 MHz und 800 MHz.

Comment 2: These guidelines might not apply to all situations. The propagation of electromagnetic waves is affected by absorption and reflexes caused by buildings, objects and people.

- a The field strength of a stationary transmitter e.g. standard cell phone stations (mobile / cordless phones) and public mobile radio services, amateur stations, MW and UHF radio and TV transmitters) cannot be precisely determined for theoretical reasons. It is recommended that an onsite test should be carried out in order to determine the electromagnetic environment caused by stationary HF transmitters. If the field strength of the massage device determined at the installation site exceeds the defined HF level listed above then the device must be monitored with regard to its normal operation. If any abnormal characteristics are recorded then it will be necessary to introduce additional measures, such as reorientation or converting the device.
- b The field strength must be less than 3 V/m over the frequency ranges from 150 kHz to 80 MHz.

12/2016 1016257-02A Operating instructions – 71/80

# 16.1.4 Table 206: Recommended safe distances between portable and mobile HF communications equipment and Model-No.: JK 98 / 48-0

Model-No.: JK 98 / 48-0 has been designed for use in an electromagnetic environment in which the radiated HF interference is controlled. The operator of the device can help to reduce electromagnetic interference by maintaining a safe distance between the portable and mobile HF communication devices (transmitters) and the device itself as recommended below with regard to the communication device's maximum output power.

Nominal transmitter power (W)	Safe distance	with regard to the transmitt (m)	ing frequency
	150 kHz to 80 MHz $d = 1.2\sqrt{P}$	80 MHz to 800 MHz $d = 1.2\sqrt{P}$	800 MHz to 2.5 GHz $d = 2.3\sqrt{P}$
0,01	0,12	0,12	0,23
10	3,8	3,8	7,3
1	1,2	1,2	2,3
0,1	0,38	0,38	0,73
100	12	12	23

The recommended safe distance (d) in metres (m) can be determined by using the equation that applies to the transmitters frequency in the case of transmitters where their nominal power is not listed above, whereby 'P' is the nominal transmitter power in Watts (W) according to the details supplied by the manufacturer of the transmitter.

Comment 1: The higher value applies to 80 MHz und 800 MHz.

Comment 2: The propagation of electromagnetic waves is affected by absorption and reflexes caused by buildings, objects and people.

# 17 JK-Products, Inc. – Limited Warranty

JK-Products, Inc. warrants its products to be free from defects in materials and workmanship under intended normal use as described in the unit's Operation and Instruction Manual, for a period of one (1) year from date of sale.

This Limited Warranty applies only to the original purchaser of the equipment through JK-Products, Inc. or its authorized dealer or distributor, and is not transferable.

Global Service USA obligations under this warranty are limited to repair or replacement of any defective part without charge for that part to the original purchaser, with the following exceptions:

- A Fluorescent lamps are warranted against defects for a period of thirty (30) days from date of sale.
- B Only parts obtained through JK-Products, Inc., its authorized dealers or distributors may be used. Transportation costs for parts shipped to the consumer and the return of defective parts to Global Service USA are not included.
- C Labor will be furnished without charge for ninety (90) days from date of purchase only. All labor and related charges must be authorized by Global Service USA prior to start of repairs, and must coincide with Global Service USA established rates and time allotment policy.
- D Acrylic: Refer to Manufacturer's Acrylic Warranty Policy. It is imperative that the original customer completes and returns the enclosed warranty card within 10 days after purchase to insure valid registration and coverage for potential claims.

If the warranty card is not registered, proof of purchase from JK-Products, Inc. or its authorized dealer or distributor will be required prior to any consideration on warranty claims. This could result in service delays.

This warranty is extended to the individual or legal entity, whose name appears on the warranty registration card filed with Global Service USA, or whose name appears on the original sale document and may not be transferred to any other individual or legal entity.

This warranty does not apply to any failure of the product, or any parts of the product due to alterations, modifications, misuse, abuse, accident, improper maintenance, improper installation, acts of God or if the serial number on the product has been removed, altered or defaced. Adequate packaging must be used for returned goods to prevent freight damage.

There are no warranties which extend beyond the description on the face hereof. There is no express or implied warranty of fitness of merchantability.

The remedies provided in this limited warranty are the exclusive remedies provided to the purchaser by Global Service USA and are provided in substitution of all other remedies. Consequential and incidental damages are excluded.

No person, firm or corporation is authorized to obligate JK-Products, Inc. for any liability in connection with the sale or use of these goods.

JK Products & Services, Inc. makes no guarantees on income, return on investment, market conditions, performance, etc. with any undertaking using its products and services. Past performance is not indicative of future results.

# 17.1 Limited Acrylic Warranty

JK Products, Inc. warrants its acrylic sheets to be free from defects in material and workmanship, under intended normal use, for a period of one (1) year from date of sale of the tanning bed. Due to the tanning lotions, cosmetics, disinfectant and improper cleaners used on tanning surfaces that cannot be controlled by JK Products, Inc., after the first thirty (30) days of warranty period acrylic will be subject to a prorated cost to the consumer.

JK Products, Inc. obligations do not include transportation charges on replacement acrylic.

JK Products, Inc. assumes no liability for the cost of removing defective sheets or installing replacement sheets, or for damage to persons or property.

To make a claim, contact an authorized dealer or distributor of JK-Products, Inc. or Global Service USA with the model number, the serial number, and the date of purchase of the bed in which the acrylic will be used.

There are no warranties which extend beyond the description on the face hereof. There is no express or implied warranty of fitness or merchantability.

The remedies provided in this limited warranty are the exclusive remedies provided to the purchaser by Global Service USA and are provided in substitution of all other remedies. Consequential and incidental damages are excluded.

JK Products & Services, Inc. #1 Walter Kratz Drive Jonesboro, AR 72401

Phone: 800-445-0624 (toll-free)

Fax: 870-935-9046

e-mail: support@jkamerica.com http://support.jkamerica.com

# 17.2 Warranty Claims

# 17.2.1 Policy & Procedures

#### 1. When to file a Warranty Claim:

In the event that your tanning system is not functioning properly under intended normal use as described in the unit's Operation and Instruction Manual, you may then have established cause to file a Warranty Claim.



#### NOTE

Both the tanning system and legal registered owner must meet the criteria established under JK Products, Inc. Limited Warranty as described in this manual before any Warranty Claim will be considered.

#### 2. Where to call to place a Warranty Claim:

JK-Products, Inc. is supported nationwide by an extensive dealer/distributor network through whom the majority of our units are sold. These dealers/distributors are required by contract to stock sufficient parts to meet the various warranty and nonwarranty needs of their customers.

Therefore, in order for you to properly file a Warranty Claim, you must locate the name and phone number of the dealer/distributor through whom you pur-

chased your unit. Normally this information can be easily located either on your paid invoice or other proof of purchase documentation that you received when taking delivery of the unit.

Next, notify the dealer/distributor of the serial number, model number and date unit was purchased. This will initiate the Warranty Claim process.

Upon determination of the problem, your dealer/distributor can then supply you with the part(s) and proper instructions to return your unit to working order.

Each dealer/distributor has their own internal procedure for handling Warranty Claims and credits.



#### NOTE:

JK-Products, Inc., the manufacturer, does not involve itself in the direct handling of a Warranty Claim except where mitigating circumstances apply and where required by law.



#### NOTE:

If a part returned to Global Service USA proves to be operational and not defective, or if product code numbers on part do not correspond with individual unit date on file with Global Service USA, then a 30% restocking fee will be charged in addition to the retail purchase price of part.

Acknowledgment of the Agreement is not required for acceptance of the foregoing stipulations.

You must comply to the instructions and warnings under chapter:

- 4.1 Intended use
- 5.1 Prohibited usage
- 6.1 What you must do to avoid serious harm

Any other use shall be considered improper. The manufacturer cannot be held liable for damage or injuries resulting from misuse. The operator bears the sole risk for this.

The proper use also includes compliance with the manufacturer's instructions, operating and maintenance conditions. This device may only be operated, maintained and repaired by persons familiar with these tasks and who are aware of the dangers involved.

# 17.2.2 Labor Warranty Claim/Credit Procedures

Global Service USA furnishes labor without charge for a period of 90 days from date of purchase. All labor and related charges must be authorized by Global Service USA prior to start of repairs, and must coincide with Global Service USA established rates and time allotment policy.

Please contact our Service Department for authorization and billing procedures.

# 17.3 Limited Lifetime Warranty

Global Service USA warrants specific individual components of the tanning system against defects in materials and workmanship for the life of the product. Coverage is limited to units purchased after November 1, 1994.

This warranty is restricted to the following components only:

- Steel Back Panels
- Structural Steel Frame Components
- Exterior Steel Body.



#### NOTE:

Components are warranted on an individual basis and not as they may effect the complete product.

Warranty coverage does not include cosmetic abnormalities such as scratches, nicks, dents, rust, oxidation of paint or other cosmetic changes that do not interfere with the designed function of the unit.

This warranty does not include failure of the product due to alteration, modifications, misuse, abuse, improper maintenance, improper installation or repair.

This warranty is not transferable and is only applicable to the original purchaser named on a completed and registered warranty record at JK-Products, Inc. headquarters.

JK Products, Inc. obligations do not include transportation charged on the shipping of new components to the customer or on the return of defective components of the manufacturer. All freight charges must be paid by the customer.

There are no warranties which extend beyond the description on the face hereof. There is no express or implied warranty of fitness or merchantability.

The remedies provided in this limited warranty are the exclusive remedies provided to the purchaser by Global Service USA and are provided in substitution of all other remedies. Consequential and incidental damages are excluded.



#### NOTE:

Any misuse, abuse, modification, alteration, improper maintenance, improper installation, etc. of this product or its intended use will subject said party to direct responsibility and liabilities for any and all consequences resulting from such action. Furthermore, such actions will void all warranties and may relieve Global Service USA of any liabilities relating to said product.

# Warranty Registration

Please complete the back of the card below and return to JK Products and Services.

Ergoline

ANGEL BEAUTY Softon







Your warranty card must be completed within ten (10) business days from the date of receipt for your equipment to be covered by the manufacturer's warranty.

➢ Detach Here 

➢

JONESBORO AR 72401-9977 1 WALTER KRATZ DR J K PRODUCTS & SERVICES POSTAGE WILL BE PAID BY ADDRESSEE





12/2016

1016257-02A

Operating instructions – 77/80

### **Limited Warranty**

K Products and Services warranties it products to be free from defects in materials and workmanship under intended normal use as described in the Operation/Instruction Manual for specific defails.

This Limited Warranty applies only to the original purchaser of the equipment through JK Products and Services or its authorized distributors or dealers and may not be transferred.

JK Products & Services' obligations under this warranty are limited to the repair (or replacement) of the defective part without charge to the original purchaser with the following exceptions:

Lamps (fluorescent or high pressure) are warranted against defects for a period of thirty (30) days from the date of sale.

II. Only parts obtained through JK Products & Services, its authorized distributors or dealers may be used.

Replacement parts provided may be either new or reconditioned at the discretion of JK Products & Services.

IV. Transportation cost for parts shipped to the customer and the return of defective parts are not included.

V. Returned parts must be received in a condition such that its functional status at the time of its removal may be ascertained. Adequate packing must be used when returning any part to JK Products & Services. Warranty coverage may be deried for any claim where the part is damaged as a result of poor or inadequate

Returned parts must be received in a condition such that its functional status at the time of its removal may be ascertained. Adequate packing must be used wheturning any part to JK Products & Services. Warranty coverage may be denied for any claim where the part is damaged as a result of poor or inadequate packaging.

Labor will be furnished without charge for a period of ninety (90) days from the date of sale to the original purchaser at the original location of installation. All tab related charges must be authorized by JK Products & Services prior to repair and performed by a technician authorized by JK Products & Services. Rates and charges for repairs must comply with JK Products & Services allotment policy.

Lifetime warranty applies only to main frame super structure. Refer to the Operation/Instruction manual for specific details. VI.

VII.

The original purchaser must complete and return the attached warranty card within ten (10) business days of receipt of equipment for coverage of potential claims under this warranty. arranty card is received, proof of purchase from JK Products & Services, or an authorized distributor or dealer must be provided for a claim to be considered. JK Products & Services is the right to deny claims where proof of purchase has been provided but no warranty card was received.

This warranty does not apply to any failure of the product or any parts of the product due to alterations, use of third party or non-OEM parts, modifications, misuse, abuse, accident, improper maintenance, improper installation, or acts of God. This warranty also does not apply if:

The serial number on the product has been removed, altered, or defaced.

The serialized components of the unit do no match with other serialized components in records maintained by JK Products & Services. The serial number or serialized components have been altered with the intent to defraud.

There are no warranties which extend beyond the description on the face hereof. There is no express or implied warranty of fitness or merchantability. The remedies provided in this limited warranty are the exclusive remedies provided to the original purchaser by JK Products & Services and are provided in substitution of all other remedies. Consequential and incidental damages are excluded.

No person, firm, or corporation is authorized to obligate JK Products & Services for any liability in connection with the sale or use of these goods

JK Products & Services • One Water Kratz Drive • Jonesboro, AR 72401 870.935 1130 • 800.643.0086


Studio/Salon Name:		
Contact Name:		
Street Address:		
City:	State:	Zip:
Telephone:	Start-Up Da	ite:

Indicate below that each of the task below have been completed/that the aspects of the tanning system are in working order:

Lamps:	Features/Options:	Training:
Body	□ Skin Sensor	□ Basic Operation
□Base	☐ Air Conditioning	□ Accessing Lamps
□ Canopy	□ Aqua Mist	□ Location/Access
Facial Lamps	□ Aroma	Filters
□Shoulder Tanner	□ Audio System	□ Explanation of
Decor		Features
	Missing Components:	Settings/Adjustments
	□ Manuals	□ Audio
	Hardware	□ Springs
	□ Accessories	□ Network

By signing below, you confirm that the listed equipment was delivered to the stated address, installed, and was recieved in full and satisfactory working order.
and a second the second

Signature, 3A Dist./Aintiate	Date
Signature, Studio/Salon Representative	Date

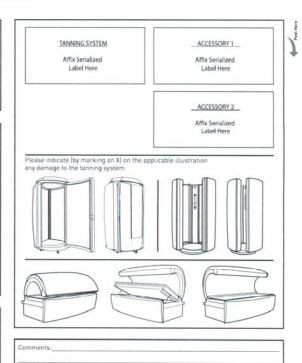

-17	
-12	
- 1	
_	

# 18 Index

Α	Н	
Air routing14	High pressure lamps,	
Application44	fire hazard	59
Application tips47	I	
В	Information	
Base plate load23	about Vibra Shape	
	Installation location	
С	Intended use	21
Chip card replacement57	L	
Cleaning46, 48, 51	Lamp configuration	25
Commissioning16	Lamps and filter panels in	20
Control Center39	the sidewall,	
Customer Service2	cleaning or replacing	61
D	Lamps in the door,	00
Decembering 64	cleaning or replacing	
Decommissioning64 Definitions6	Lamps, replacing	
Device description12	Low pressure lamps	30
Dimensions24	M	
Disinfection46, 48, 51	Maintenance overview	50 54
Disposal64	Makrolon tubes	
	Waltioloff taboo	
E	N	
Electrical specifications23	Noise level	23
EMC information69	0	
Export11	0	
г	Obligations	
F	of the studio operator	32
Facial tanner	Operating altitude	
maintenance intervals50, 54	Options	
Filter cleaning intervals53	Order numbers	25, 26
Filter panels59	Р	
maintenance intervals50, 54	•	
Foreseeable misuse32	Packaging	
Functions40	Plastic surfaces (care)	
G	Power rating	
Guidelines11	Prohibited usage	20
Outubilities11	R	
	Recycling	64
	Risk of injury	28

# S

Safety measures during	
maintenance work	49
Scope of delivery	11
Sensor	30
Sensor,	
cleaning/disinfection	59
Setup location	15
Skin types	37
Spare parts	50, 54
order numbers	26
Staff training	32
Starter	25, 59
Storage	64
_	
T	
Tanning times	38
Technical data	23
Transport	14
Troubleshooting	66
U	
UV lamps	
control	25
power rating	
power raung	20
V	
Ventilation	14
Vibration plate	28